


Contemporary Lighting

PRODUCT NAME: Pod

ITEM NUMBER: E21459-93BKGLD

Please consult your electrician for hanging fixture and wiring.

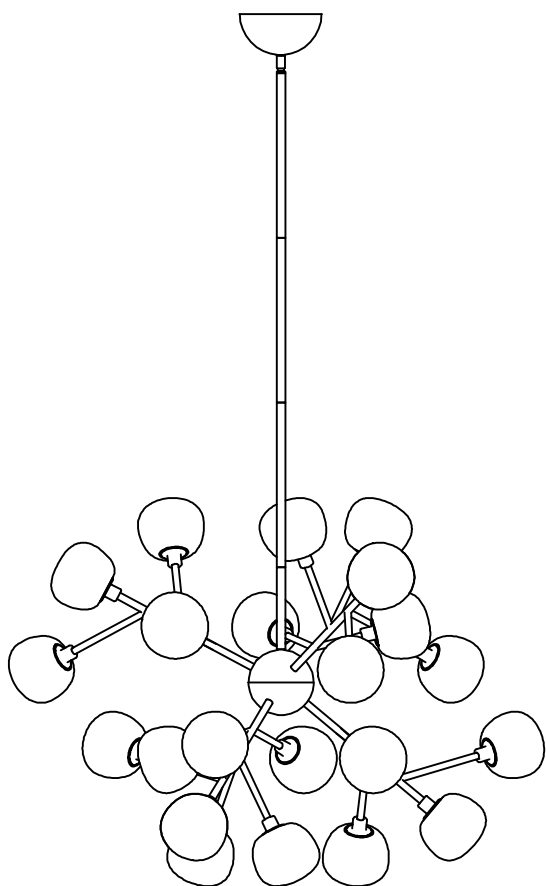

The fixture is designed to dim with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer.

Below is a list of recommended dimmers:

Lutron MACL-153M

Lutron DVL-153P

Lutron SCL-153P


Leviton IPL06-10Z

Leviton 6674-POW


Due to inrush current wattage should not exceed 150 watts of product for a 600 watt dimmer.

Bulb(included): 16 x 4W LED G9 bulbs


IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation

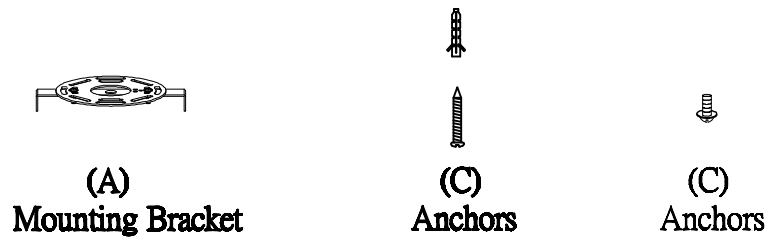

Locate all hardware & components before discarding packaging

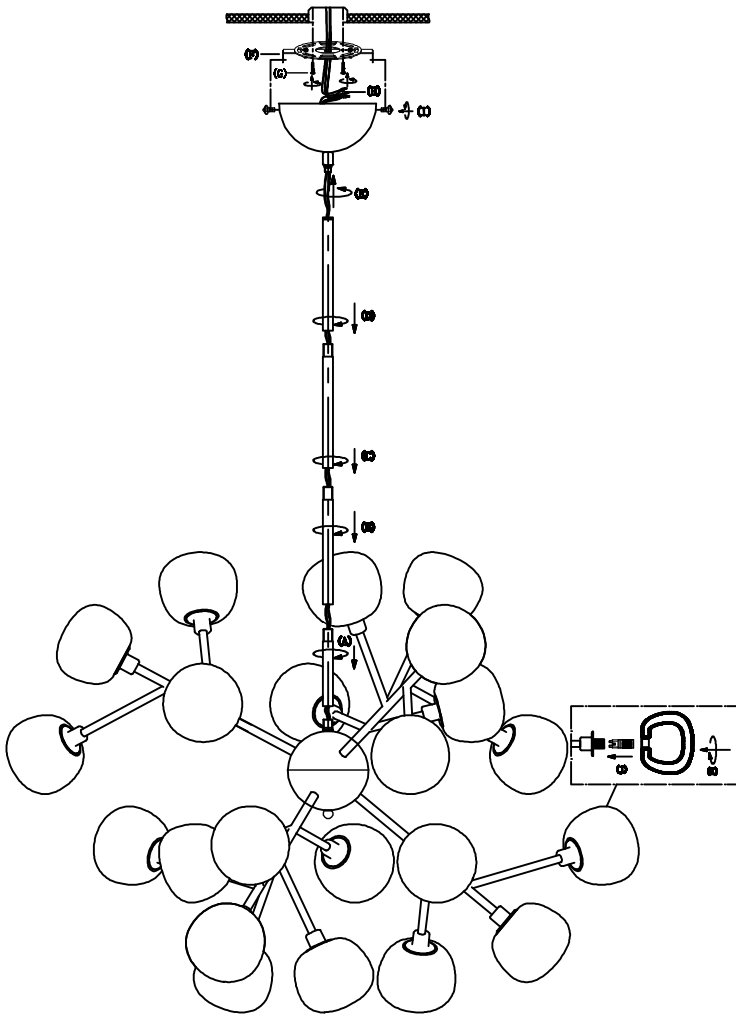

1.)

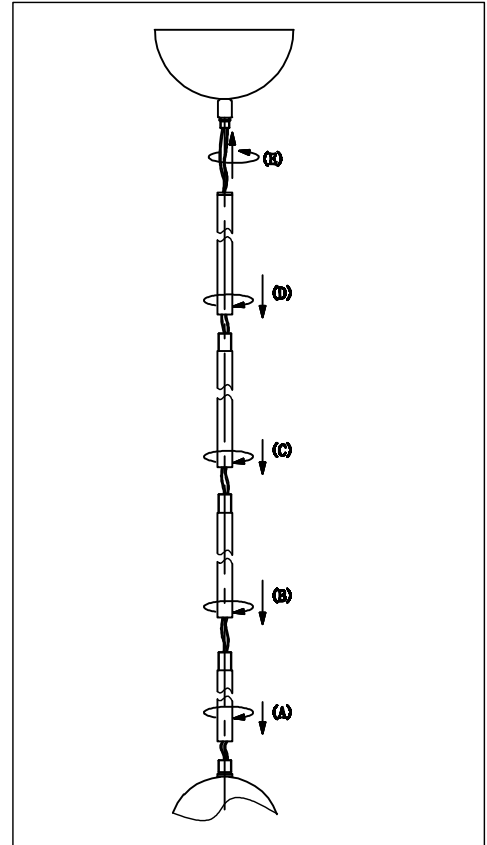

Step. 1: Run wire through stems and combine stem lengths to meet desired mounting height.

Cleaning & Care:

Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.

IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation



(A)
Mounting Bracket




(C)
Anchors




(C)
Anchors

Locate all hardware & components before discarding packaging

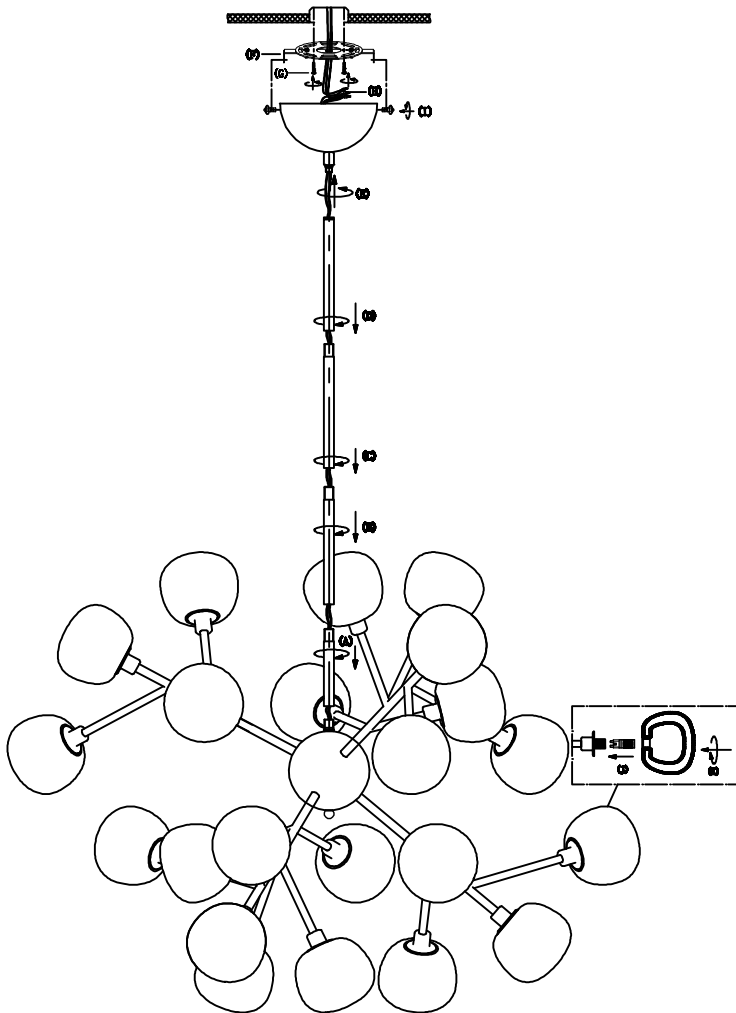


2.)

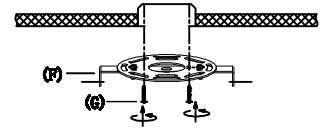


Step.2: Remove mounting bracket (F) from fixture and install to electrical box.

3.)




Step.3: Wire fixture to wires (H) in outlet box. Copper wire is for Ground.

4.)

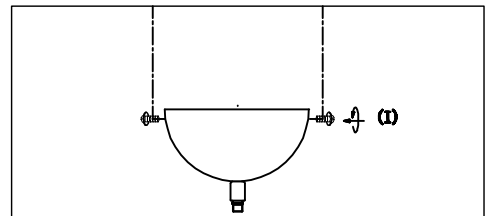

Step.4: Adjust wire length to desired mounting height, and tighten strain relief screws to secure. Install fixture to bracket and tighten screws (I) at the ends of the canopy to secure.

5.)

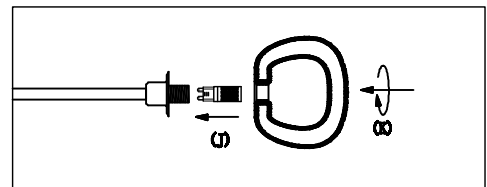

Step.5: Install G9 light bulb provided (J) and screw on glass shade (K) .

Cleaning & Care:

Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.