

# Contemporary Lighting

PRODUCT NAME: Rubic  
ITEM NUMBER: E22912-BKPC


Please consult your electrician for hanging fixture and wiring.

This fixture is designed to dim with dimmer.  
Dimming levels will vary by dimmer.  
Below is a List of Recommended Dimmers:

- Lutron DVELV-330P
- Leviton IPL06-10Z
- LegrandTru-Universal ADTP703TUW4
- Lutron MAELV-600M
- Lutron SAELV-153P

Due to inrush current, wattage should not exceed  
150 Watts of product for a 600 Watt dimmer.

**WARNING:** Wires need to be connected to transformer  
found in canopy and should not be connected directly to  
power source or a short may occur.

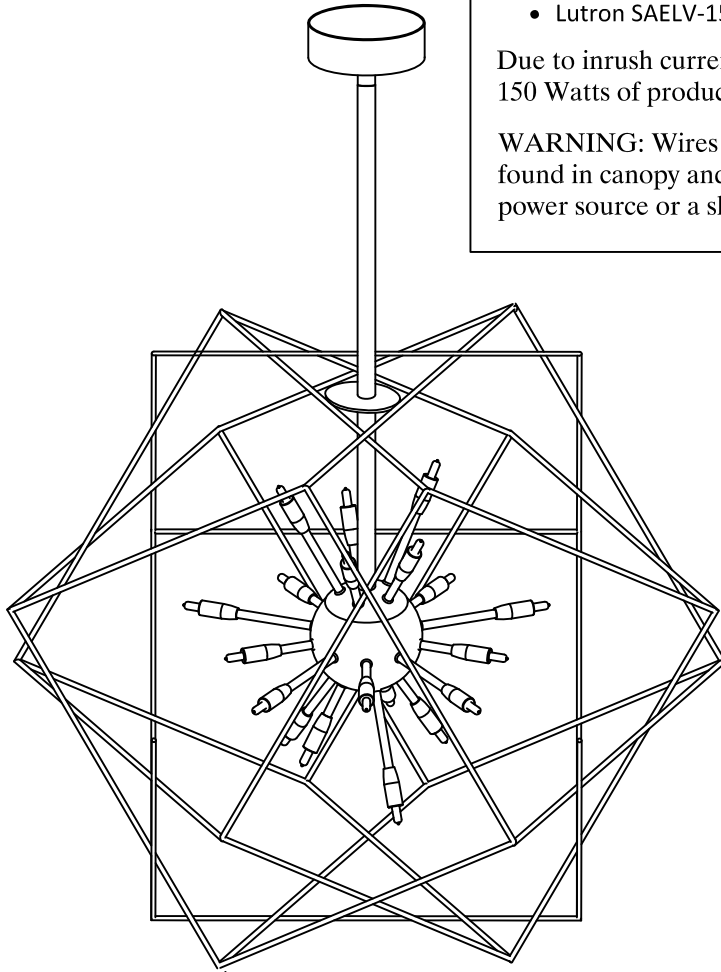


20x1.2W G4 LED 3000K


**IMPORTANT: Turn OFF the power at the main fuse or circuit breaker box before starting installation**



(A)  
Mounting Bracket




(B)  
Canopy



(C)  
Stems




(D)  
Ball Nut




(E)  
Back Plate Screws

Locate all hardware & components before discarding packaging

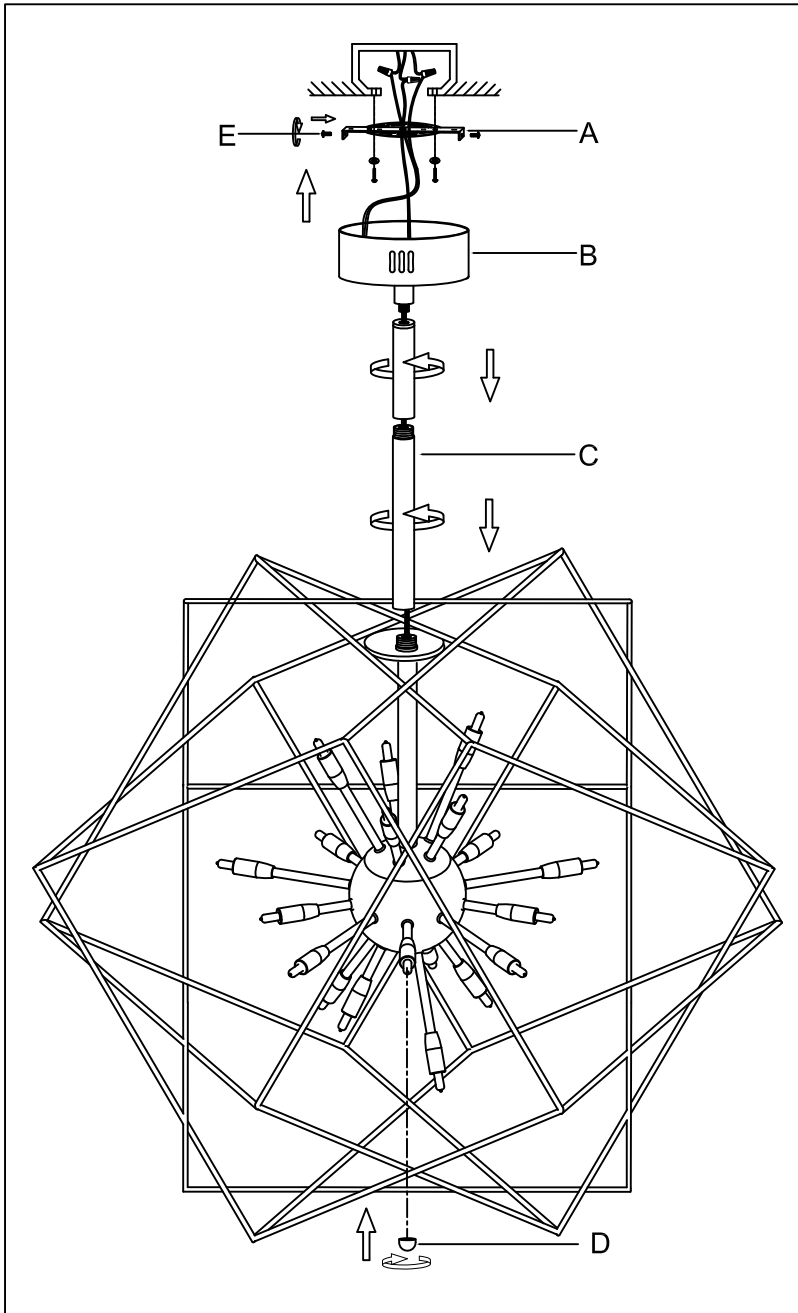


**Cleaning & Care:**

Clean with soft cloth and a mild detergent.  
Do not use abrasive cleaner.

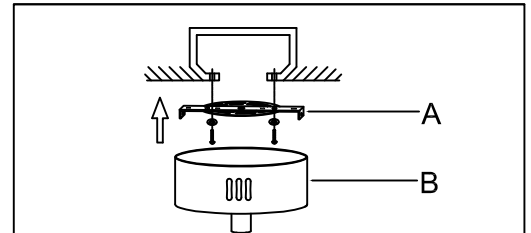


1.)

Step.1: Remove mounting bracket from canopy and install to electrical box.

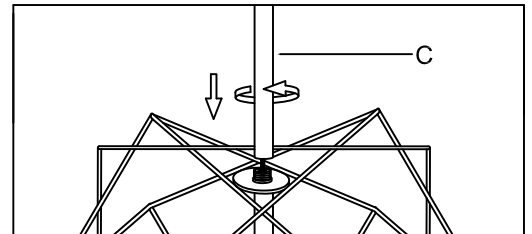


2.)

Step.2: Run wire through stem (C) lengths and combine stem lengths to meet desired mounting height. Attach the stem (C) to the body of the fixture.

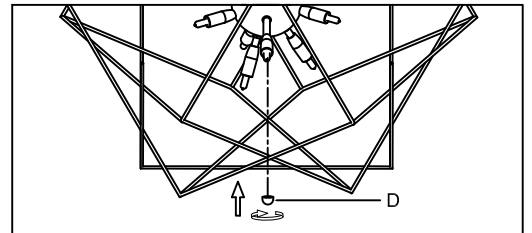

3.)

Step.3: Tighten the ball nut (D) on the bottom of the fixture.

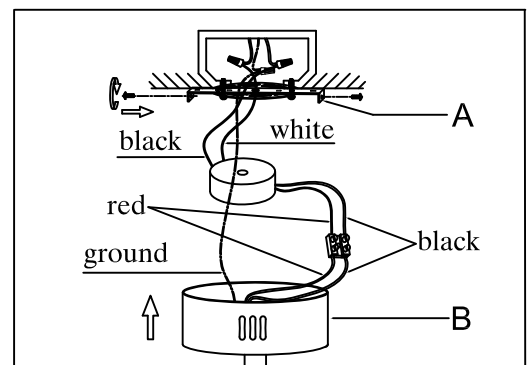

4.)

Step.4: Wire low voltage red/black wires to the terminal block, and wire high voltage black/white wire to the outlet box. Install the canopy (B) to the mounting bracket (A) using screws provided.