Contemporary Lighting ™

Assembly Instruction For
EC85003/EC85004/EC85013/EC85014/EC85018/
EC85022/EC85025

**Turn off power at breaker for outlet fixture is being installed to.**

**1. Position the Backplate (B) on the ceiling at desired location and mark the place for the anchor at the extra 4 holes location of the Backplate (B).**

**2. Drill pilot holes on the marked spots and insert Plastic Anchors (A).**

**3. Attach the Backplate (B) to the outlet box using the Screws (C) provided. Use the Wood Screws (G) to further secure the Backplate (B) to ceiling at the 4 plastic anchor (A) place.**

**4. Wire Jack Canopy per Diagram A**

**5. Attach Jack Canopy (D) to the Backplate (B) with Screws (E) and tighten Screw (E) to secure. Please refer to Diagram B for details.**

**6. Attach Cap (F) to the Socket (H), then insert the Jack to the Socket (H). (Jack is not provided).**

**7. Install Jack Fixture follow instruction provided with Jack Fixture.**

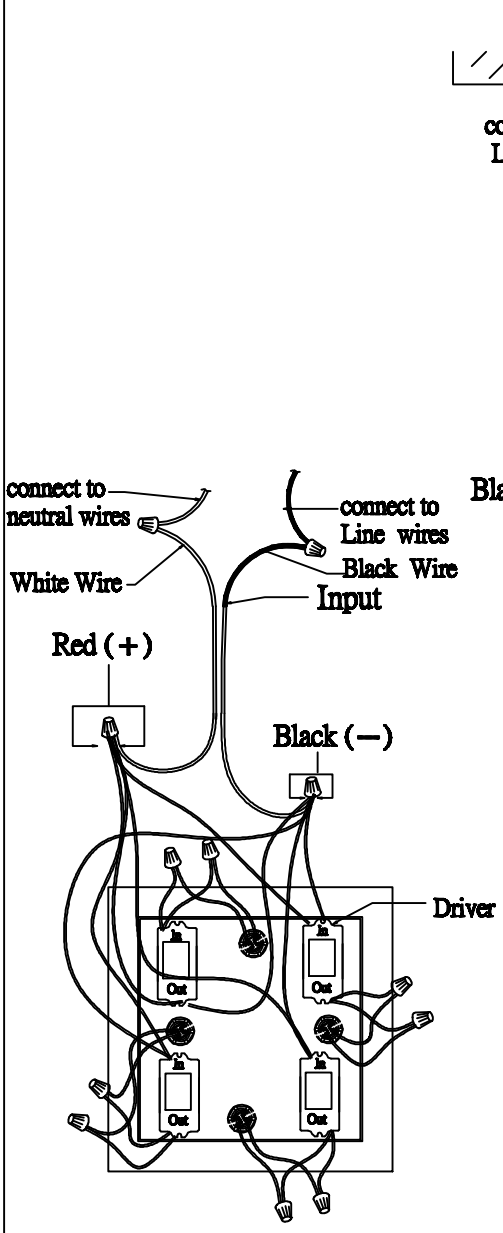


Diagram B

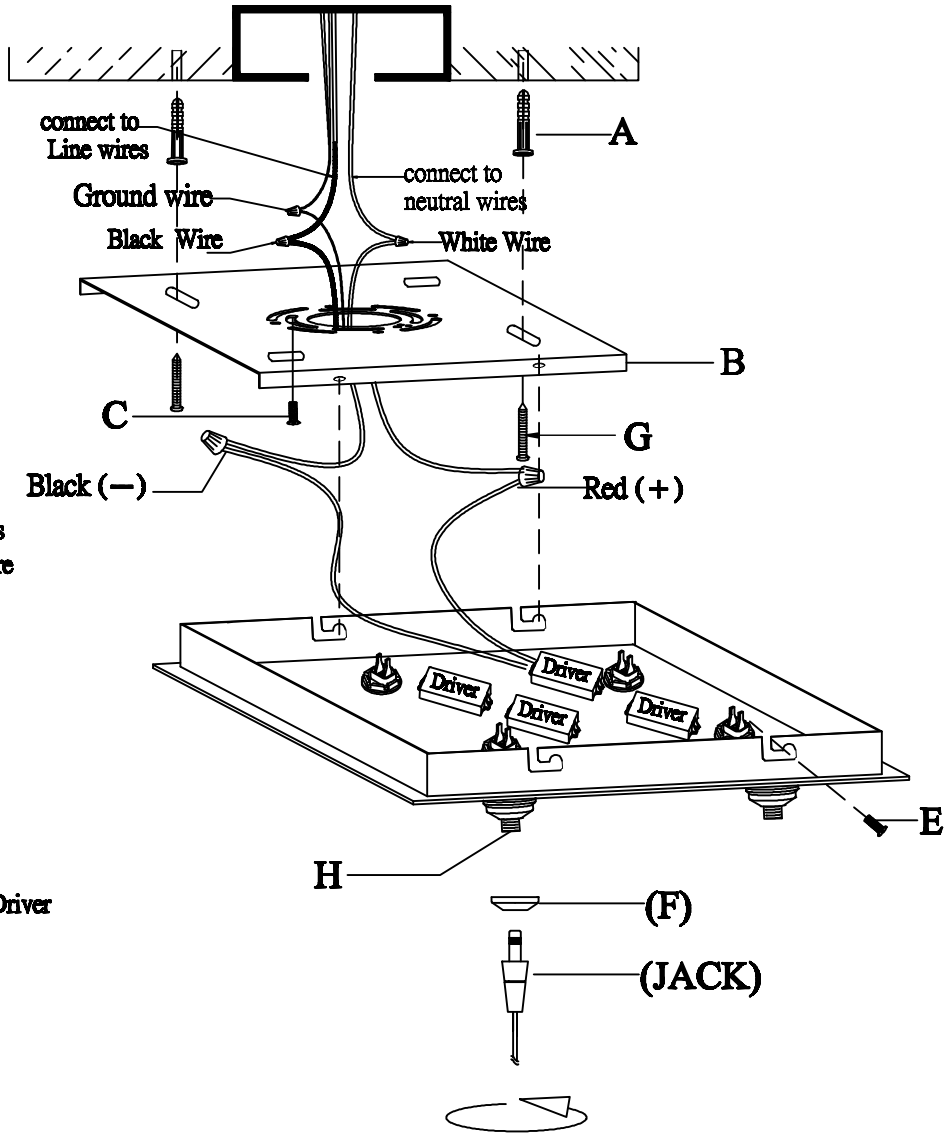


Diagram A